

Model		Output Torque (In-Lbs)							
		45PSI	50 PSI	60 PSI	75 PSI	80 PSI	90 PSI	100 PSI	120 PSI
JFS1-200	Start/End	9435	11011	12577	15728	17295	18870	21880	25004
	Run	4983	5806	6638	8302	9125	9957	11551	13197
JFS1-250	Start/End	15056	17569	20083	25101	27606	30120	0	0
	Run	7948	9276	10595	13250	14569	15896	0	0
JFS1-300	Start/End	21765	25394	29014	0	0	0	0	0
	Run	11489	13400	15312	0	0	0	0	0
JFS1-350	Start/End	26093	30447	0	0	0	0	0	0
	Run	13772	16065	0	0	0	0	0	0
JFS2-250	Start/End	18569	21667	24756	30952	34050	37148	43334	49530
	Run	9798	11435	13073	16330	17968	19614	22871	26137
JFS2-300	Start/End	26845	31315	35785	44733	49212	53681	0	0
	Run	14162	16525	18888	23606	25969	28332	0	0
JFS2-350	Start/End	32182	37546	42910	53637	59001	0	0	0
	Run	16985	19817	22650	28305	31138	0	0	0
JFS2-400	Start/End	42476	49548	56629	0	0	0	0	0
	Run	22420	26155	29890	0	0	0	0	0
JFS3-300	Start/End	32280	37661	43042	53805	59187	64559	75322	86085
	Run	17038	19879	22721	28394	31235	34076	39750	45432
JFS3-350	Start/End	38705	45158	51610	64515	70958	77411	90316	103220
	Run	20428	23836	27235	34050	37449	40856	47663	54478
JFS3-400	Start/End	51079	59594	68108	85138	93652	102167	0	0
	Run	26960	31456	35944	44937	49424	53920	0	0
JFS3-300D	Start/End	64559	75322	86085	107602	0	0	0	0
	Run	34076	39750	45432	56788	0	0	0	0
JFS3-450	Start/End	65011	75844	86687	108354	0	0	0	0
	Run	34315	40033	45751	57186	0	0	0	0
JFS3-500	Start/End	80792	94263	107726	0	0	0	0	0
	Run	42644	49751	56859	0	0	0	0	0
JFS4-350	Start/End	46972	54797	62630	78287	86111	93936	109593	125251
	Run	24792	28925	33050	41316	45450	49583	57841	66108
JFS4-400	Start/End	61984	72322	82651	103309	113647	123976	144634	165301
	Run	32713	38166	43618	54522	59974	65427	76340	87244
JFS4-450	Start/End	78889	92042	105185	131482	144634	157778	184083	0
	Run	41635	48574	55513	69392	76331	83270	97149	0
JFS4-500	Start/End	98043	114381	130720	163407	179746	196085	0	0
	Run	51743	60373	68994	86244	94865	103486	0	0
JFS4-600	Start/End	141890	165540	189190	0	0	0	0	0
	Run	74888	87368	99848	0	0	0	0	0
JFS5-500	Start/End	127092	148272	169461	211822	233003	254183	296553	338914
	Run	67073	78261	89439	111797	122976	134155	156512	178870
JFS5-600	Start/End	183933	214592	245244	306554	337214	367874	0	0
	Run	97078	113257	129437	161796	177976	194156	0	0
JFS5-700	Start/End	264548	308634	352730	0	0	0	0	0
	Run	139625	162894	186163	0	0	0	0	0
JFS5-800	Start/End	342976	400136	0	0	0	0	0	0
	Run	181012	211185	0	0	0	0	0	0
JFS6-600	Start/End	224665	262105	299553	374442	411881	449330	524218	599106
	Run	118577	138332	158097	197625	217381	237145	276673	316193

Model		Output Torque (In-Lbs)							
		45PSI	50 PSI	60 PSI	75 PSI	80 PSI	90 PSI	100 PSI	120 PSI
JFS6-700	Start/End	323123	376973	430831	538539	592389	646247	0	0
	Run	170532	198962	227382	284223	312653	341073	0	0
JFS6-800	Start/End	418918	488735	558560	698202	0	0	0	0
	Run	221098	257945	294791	368494	0	0	0	0
JFS6-900	Start/End	538070	627748	717436	0	0	0	0	0
	Run	283984	331311	378646	0	0	0	0	0
JFS7-700	Start/End	383593	447524	511455	639317	703247	767178	895040	1022901
	Run	202449	236189	269929	337418	371158	404898	472387	539867
JFS7-800	Start/End	497311	580201	663082	828852	911742	994622	0	0
	Run	262468	306218	349960	437452	481193	524944	0	0
JFS7-900	Start/End	638768	745228	851687	1064607	0	0	0	0
	Run	337126	393312	449498	561879	0	0	0	0
JFS7-1000	Start/End	775179	904377	1033576	0	0	0	0	0
	Run	409129	477308	545496	0	0	0	0	0