


Axiom™ AN

Advanced nonincendive & I.S. on/off valve controller



7AN20STEN



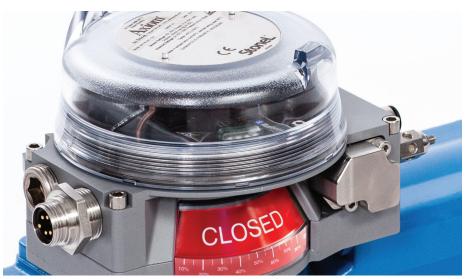

Axiom[™] AN Advanced performance

The Axiom AN series offers unmatched reliability using non-contact position sensing with solid state electronics and contaminant-tolerant pneumatic control. Coupled with its spaceefficient design, corrosion resistance and networking/ Wireless Link capability, the AN offers unrivaled convenience and cost-saving benefits in hazardous and general purpose process applications.

Exceptional reliability

The proven technologies combined with efficient design and durable materials, delivers long life and exceptional performance.

- Survives harsh conditions
- Tolerates air contaminants
- · Provides solid state position-sensing

User-friendly advanced technology

Designed with the user in mind, the Axiom AN offers the utmost in ease and convenience

- · Rapid enclosure entry
- Easy configuration
- Convenient wiring access
- · Wireless Link app set up

Universal application


The strategic engineering reduces inventory and ensures universal adaptability in many applications and environments.

- · Universal voltage capability
- Selectable SR/DA action
- · Direct actuator attachment

Space efficient design

The Axiom AN encloses all electrical components in a compact package. The automated valve spacing envelope is minimized without compromising performance or maintainability.

- Requires less than 5" of total clearance
- Additional 2" clearance for cover removal
- No tools for cover removal

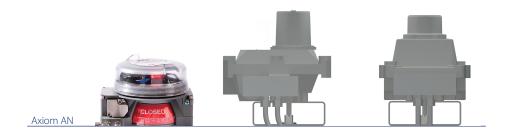

Features

1. Impact-resistant cover

Vapor tight, Lexan® cover screws off for rapid entry without tools. It withstands high-pressure wash downs and typical process environment corrosives.

2. Universal voltage solenoid system

Operates from 24 VDC – 250 VAC at extended temperate range and features manual override. Single or dual coil available.

3. Convenient settings

Touch pad enables position settings to be conveniently locked in. Switch settings remain in place during power cycling.

4. Fully sealed module

Solid state, fully potted sensors provide protection against residual moisture, vibration, and corrosives.

5. High flow pneumatic valve

5-way, 2-position valve operates on standard plant air. Rebreather prevents ingestion of contaminated air into actuator.

6. High visibility indication

Mechanical and electronic indication confirms open and closed position. Intense LEDs display position status from a distance.

7. Exceptional long life


Magnetic position sensor has no bushings or shafts to wear out, delivers reliable performance, and is unaffected by actuator shaft

8. SR/DA plug

Plug positions into designated port to enable spring return or double-acting operation.

9. Direct actuator attachment

Compact mounting manifold system requires less space and wiring, connects to VDI/VDE 3845 (NAMUR) actuators and adapts to spring return or double-acting actuators.

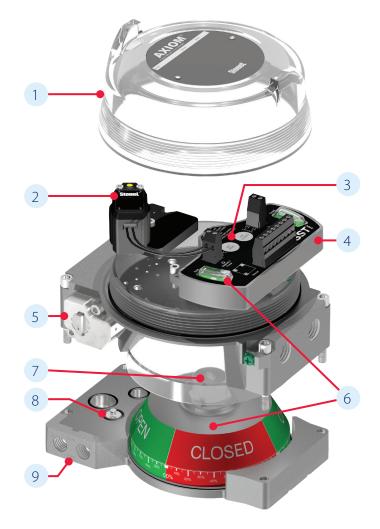

Proven performance in process industries

- Chemical
- · Oil and gas
- Pharmaceutical and biotech
- Food and beverage
- Marine
- Offshore service vessels (OSV)
- Biofuels
- And more



Pneumatic control



The Axiom's pneumatic valve system consists of a low-power pilot that drives the main highflow spool valve. Pilots may be selected for conventional or bus networking applications. Both stages of the pneumatic valve system have been designed for long life, high tolerance to air line contaminants, and ease of maintenance should components become fouled. Pilots are automatically associated with the appropriate function selected.


Special features

- Solenoid pilot and main spool design offer long life, exceptional tolerance to dirty air, and tight shut-off.
- Universal voltage solenoid system may be used for standard AC or DC applications.
- Five-way, two-position spring return configuration may be used for either single- or double-acting actuators. Dual coil shuttle piston versions are also available for fail-in-last position.
- Rebreather channels exhausted air from pressurized side of actuator into spring side, preventing ingestion of contaminated air from the environment that may corrode springs or actuator internals.
- Pneumatic manual override is conveniently located on top for easy access.



Single or dual pilot configuration

The Axiom AN is available in either single or dual pilot configurations. Dual pilot options are available for shuttle piston, fail-in-last position applications. Several external manual override options are also readily available. For special valve configurations with non-standard manual override features, please consult StoneL.

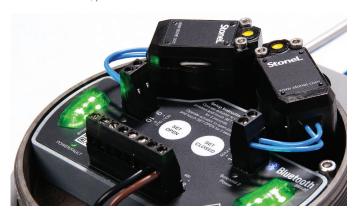

General pneuma	tic valv	e specifi	cations	
Valve design	Pil	ot operated s _l	oool valve	
Configuration		ngle pilot ual pilot	5-way, 2-position, spring return 5-way, 2-position, shuttle piston	
Flow rating		3 Cv 2 Cv		
Axiom porting		"NPT (0.8 Cv) "NPT (1.2 Cv)		
Manifold porting	1/4′	"NPT		
Operating pressure	45	psi to 120 psi	(3.1 to 8.2 bar)	
Operating temperature	-41	0° C to 80° C (-	40° F to 176° F)	
Operating life	1 1	million cycles		
Manual override	Op		itary al momentary available al latching available	
Materials of construction	Spool Body Seal space Spool sea O-rings End-caps		Nickel plated aluminum Epoxy-coated anodized aluminum Polysulfone Nitrile compound Nitrile compound Nickel plated aluminum and stainless steel	
Solenoid coil specifications				
35 Operating voltage Power consumption Filtration requirements	12 20		- 55 VDC 0 VAC (1.1 watts typical) VDC (0.5 watts typical)	
45				
Operating voltage Power consumption Filtration requirements	0.5		put of barrier) DC; 1.0 watt @ 24 VDC	
92 & 97 Operating voltage Power consumption Filtration requirements	0.5	VDC 5 watts 0 micron		

Manifold and mounting system

The Axiom is designed to readily adapt to most quarter-turn actuators. The mounting manifold system combines the mounting base and pneumatic manifold to minimize space and simplify installation. It attaches the Axiom directly to the actuator and ports air from the pneumatic valve to the actuator.

Included in the manifold system are:

- 1. Actuator shaft adaptor and fastener.
- 2. Epoxy-coated anodized aluminum mounting plate manifold with o-rings and stainless steel fasteners.
- 3. Pneumatic plug for SR/DA configuration.

The manifold system readily adapts to VDI/VDE 3845 sizes 1, 2 and 3. Special variations may be made for sizes 3, 4 and non-standard quarter-turn actuator mounting patterns.






The mounting manifold system is specified and sold separately. Kits are specific to actuator manufacturer. For kit numbers visit: StoneL.com/mounting.


Single or double-acting configuration

The same Axiom model is suitable for both single-acting/spring return (SR) and double-acting (DA) actuators. The standard rebreather capability for single-acting/spring return is built in. Field configuration may be made by conveniently removing and reinserting the plug for the appropriate actuator type. For rebreather to function properly, both manifold ports must be tubed to the actuator.

Spring return actuator

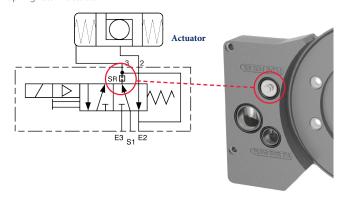



Double-acting actuator

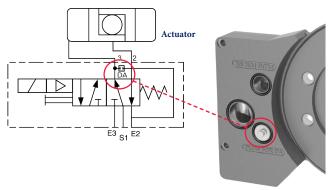


Sensing and communication module

SST NO sensor (35S)		
Configuration	(2) NO 2-wire solid state sensors	
Voltage range	20 - 250 VAC/VDC	
Minimum on current	2.0 mA	
Maximum continuous current	0.1 amps	
Typical leakage current	AC circuits 0.35 mA DC circuits 0.25 mA	
Typical voltage drop	6.5 volts @ 10 mA 7.2 volts @ 100 mA	
Circuit protection	Protected against short circuits and direct application of voltage with no load.	
Wiring diagram (355)	SOL1 PWR1 SOL1 PWR2	0

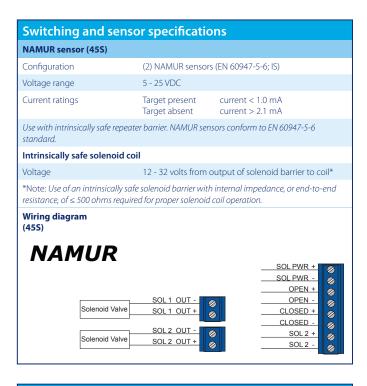

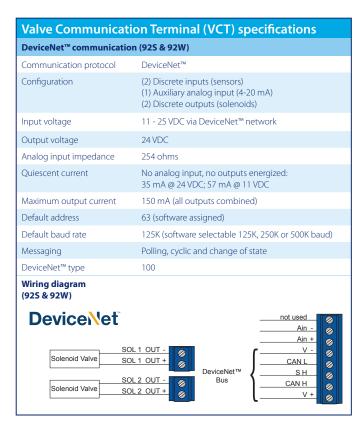

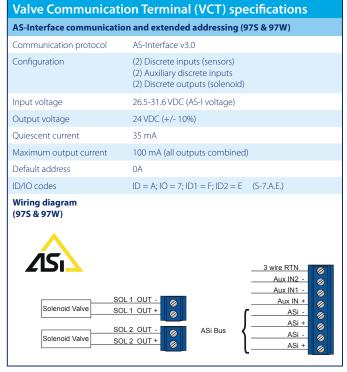

Position sensor and module

The Axiom platform has all position sensing, communication or switching integrated into StoneL's C-module. Users may set open/ closed positions conveniently and accurately on all modules. And easy to view instructions, along with bold LED indication, are displayed on the module itself.


Continuous sensing with open/closed settings

The C-module (continuous sensing) integrates a magnetic resistive sensor system to monitor exact valve position throughout the rotational range. Touch-sensitive or remote open and closed position setting along with microprocessor based operation make this stateof-the-art system convenient, reliable, and smart.

Position settings are made using the touch-sensitive buttons on the module's overlay. Simply operate the actuator to the open position (using standard internal manual override) and touch the SET OPEN button. Operate the actuator to the closed position and touch the SET CLOSED button. Position settings remain locked in when power is removed and reapplied.

Reliable position sensing

An extremely reliable solid state magnetic resistive (mag res) sensor detects the valve position by monitoring the orientation of a magnet attached to the actuator. This design is tolerant of lateral and vertical shaft movement, which may occur in heavily used actuators, without affecting rotational measurement.

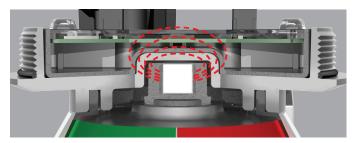

No cams, shafts or seals - offering exceptional vibration tolerance and nothing to wear out.

Axiom AN with Wireless Link

Easily access hard-to-reach automated valves

Discover convenient remote access of your automated valves when you install the Axiom AN with AS-Interface and DeviceNet featuring Bluetooth® technology. Devices may be remotely accessed from up to 50 meters depending on obstructions. Setting changes and solenoid control are enabled through the DeviceNet or AS-Interface network or by the AS-Interface power supply jumper.

Special features

- Improve safety by easily controlling hard-to-reach automated valves without putting plant personnel at risk.
- Look up factory preset module code and serial number remotely.
- Electronically enter and store key automated valve system information including user tag and maintenance log.
- Reduce network commissioning time by accessing the VCT address and baud rate to make changes.
- Reduce maintenance time by monitoring valve cycle count, cycle times, storing maintenance logs, and accessing multiple valves from one location.
- Conveniently retrieve installation manuals for additional technical information when connected to internet.





Customize the tag for a device, change the address, force the solenoids on or off, wink the device, and set the valve limits.



Store and view additional information about a specific valve.



View real time valve position, cycle count, cycle timing, current valve temperature, error status, and more.

Interfacing devices

Conventional Apple® devices may be used including:

iPhone® Version 4S and above iPad® Version 3.0 and above

iPad mini™

Contact StoneL regarding additional devices and special enclosures to make these devices suitable for use in hazardous locations.





Set up and operation

Devices with Wireless Link are commissioned and set up identically to the standard AS-Interface or DeviceNet unit. In addition, when powered up with a conventional power source or by the network, it may be accessed by standard iOS devices. The Axiom is accessed with the Bluetooth® protocol using the StoneL Wireless Link application. Sequence of operation is:


- 1. Download the StoneL application from the App Store onto your device (free of charge)
- 2. Start the application in your Apple® device
- 3. All energized wireless modules in range will come up
- 4. Push wink to positively confirm the device you have linked (device LEDs will flash)
- 5. Touch the specific ID tag to link with your handheld.


You can then monitor all status and diagnostic information and make necessary information changes to the free form fields at any time. Switch settings, address changes, and solenoid operation may be performed only if network- or power supply-enabled. Other information may also be added to the free form fields.

Specifications for Wireless Link			
Standard specifications apply to Axiom AN92W $\&$ AN97W. Additional specifications for Wireless Link are as follows:			
Communication	Bluetooth® technology; single mode (not compatible with Bluetooth Classic)		
Transmit power	4dBm or ~2.5 milliwatts		
Data rate	1 Mbit/second; effective information transmit rate ~10 Kbits/second		
Range	Up to 100 meters (330 feet) in free space. Range is reduced by obstructions between hand-held device and Wireless Link VCT. Line of site is not necessary.		
Registrations	FCC, IC, CE		
CE compliance	Exceeds industrial compliance standards		
VCT identification	VCTs in range will be displayed		
VCT link	One device accessed at a time between client (hand-held device) and server (VCT). Each server accessed by one client at a time		
Application	StoneL Wireless Link available from the App store		
Hand-helds	Compatible with iPhone® and iPad® with iOS 9 or later		

Wireless Link enabled network

All settings and inputs are locked when standard network communication is functioning. For fast commissioning and asset management you can import and export electronic tags, model number, serial number, device address, descriptive fields, diagnostic

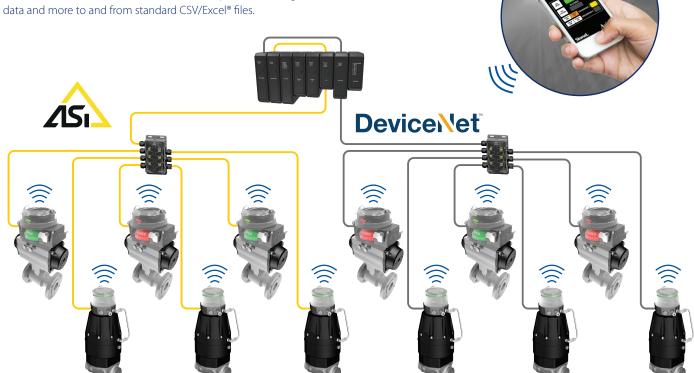

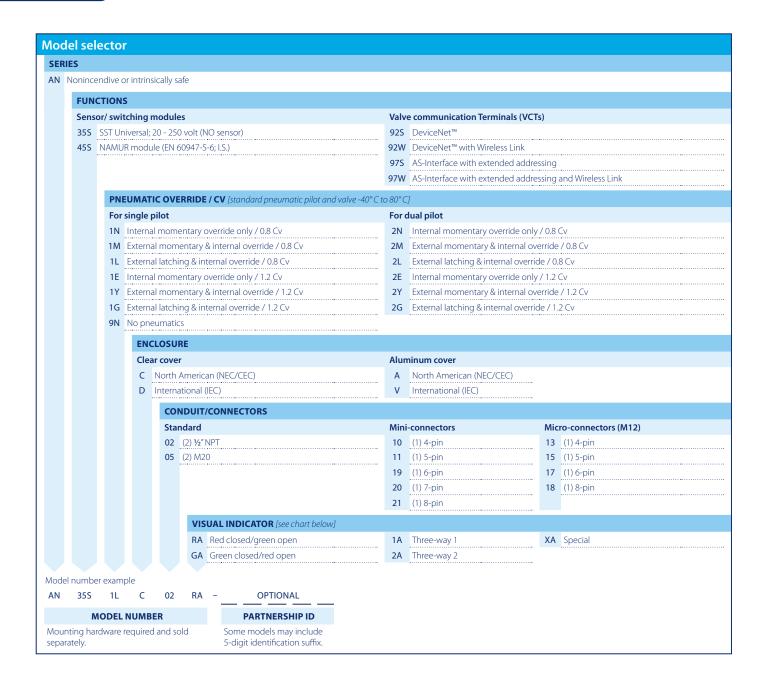

Visual indicator designations

Clearly view valve position status from up to 75 feet with the Axiom's visual indicator. The indicator's rugged Lexan® construction makes it resistant to physical damage and tolerant to most corrosives.




DESIGNATION	0°	90°
R	RED CLOSED	GREEN OPEN
G	GREEN CLOSED	RED OPEN
1	A B	A B
2	A B	A B
Х	Specialty configuration - please consult factory	

Specifications	
Materials of construction	
Housing and air manifold plate	Epoxy-coated anodized aluminum
Visual indicator drum	Nylon
Visual indicator cover	Polycarbonate
Fasteners	Stainless steel
O-rings	Nitrile compound
Operating life	1 million cycles
Temperature range	-40° C to 80° C (-40° F to 176° F)
Warranty	
Sensing and communication module	Five years
Mechanical components	Five years
Unit weights	
Aluminum	2.38 kg / 5.25 lb
Unit dimensions	
Unit height Cover removal clearance	122 mm [4.81 in] 214 mm [5.80 in]

Position sensing	
Accuracy	Within 1°
Repeatability	Within 1°
Setting buffer	4° from setpoint (Rotational distance from original setpoint where switch will energize on return stroke)
Dead band	6° from setpoint (Rotational distance from original setpoint where switch will de-energize)
Max rotational range	120°
Ratings	
Nonincendive (Class I and II, Div. 2)	All models*
Intrinsically safe (Ex ia Zone 0; Class I and II, Div. 1)	Function 45S only*
Enclosure protection	
Type 4, 4X and 6	All models
Ingress Protection 66 and 67	All models
Approvals*	See StoneL.com/approvals
* Only models listed on StoneL's o	fficial website are approved per specific rating.

Dimensions

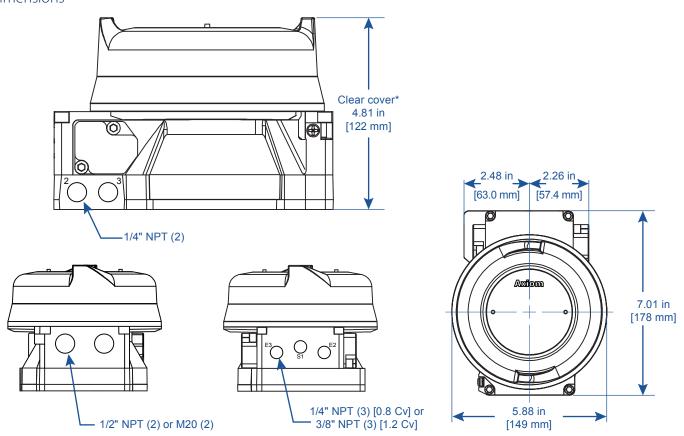

^{*} Aluminum cover 4.90 in [125 mm]



26271 US Highway 59, Fergus Falls, MN 56537 USA Tech hotline +1 218 737 0701 Tel. +1 218 739 5774 Email: sales@stoneL.com

StoneL.com

Publication Number S-912-12/20

Subject to change without prior notice. Neles, Jamesbury and Easyflow by Neles, StoneL, and certain other trademarks, are either registered trademarks or trademarks of Neles Corporation or its subsidiaries or affiliates in the United States and/or in other countries. For more information www.neles.com/trademarks